

USER MANUAL

KIT IP 250022

EKOAX Plug&Play Installation Kit



V01



TABLE OF CONTENTS

Installation	. 3
Packaging and accessories	.3
Connection	. ∠
Installations examples	. ∠
Troubleshooting	. 5



Installation

The kit is configured for proper operation from its installation. The two devices are configured to function with IPTV without having to perform any previous configuration. Being fully transparent equipment, as it permits changing any network configuration, so all the management will be carried out by the main client Router.

Packaging and accessories

Included in the kit packaging are the following components:







Power supply X2



IPC BMINI



MI RP IEC X2




Connection

In order for the Kit to function properly, it must be connected as follows

- The IPC BMH master unit must be connected with an Ethernet cable to the main Router. The RF output must be connected to the power socket using the MI RP IEC. The equipment is powered through its power supply.
- The IPC-BMINI slave device will be connected at the point where the network connection is to be provided. The RF output must be connected to the power outlet socket using the MI RP IEC. The equipment is powered through its power supply.


Installations examples

Apartment installation

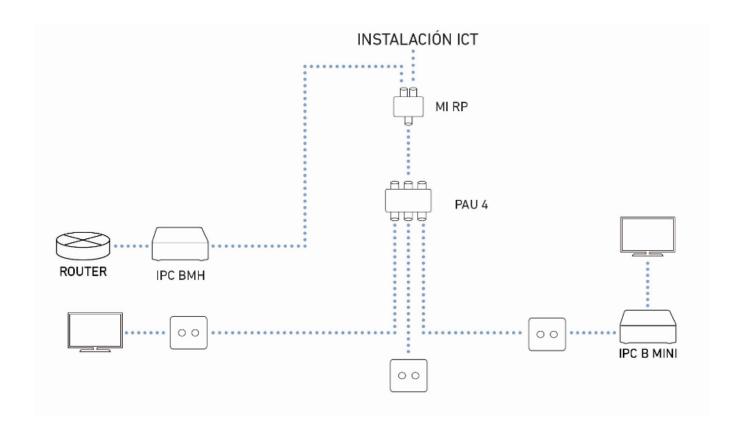



Single family home installation

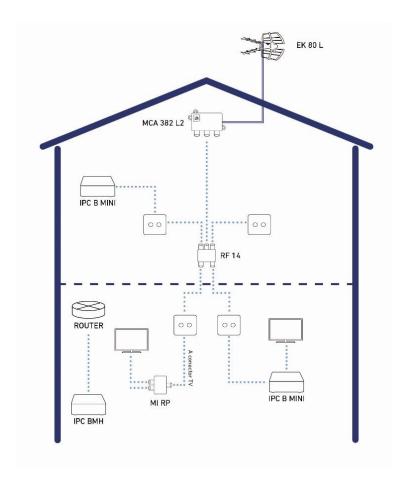

Troubleshooting

- There is no connection in the slave device: Check if there are problems in the client installation. In order to verify that the devices work correctly, connect the devices to each other directly by means of a coaxial cable.
- There is a connection but the IPTV does not work: Phone the SAT call-centre so as to perform equipment verifications.