



EKSELANS BY ITS

USER MANUAL

MON43V

V1.0

INDEX

1.Product Description	3
1.1 General characteristics	3
2 MON43V Monitor	4
2.1 Configuration	4
2.1.1 Change Ringtone	4
2.1.2 How to Display Additional Camera	4
2.1.3 Viewing and Interacting with Exterior Plates and Additional Cameras	4
2.1.4 Configure Outer Plate Camera and Additional Camera	5
2.1.5 Table of Configuration Codes for Exterior Plates and Additional Cameras	5
2.2 MON 43V Monitor Connection	6
3 Identification Code Table	7


1 - Product Description

MON43v monitor with high quality 4.3" color screen. Hands-free system with opening system without the need for prior dialing. Possibility of external viewing of the video intercom from the same monitor panel.

1.1 General characteristics

- Non-polarized two-wire system.
- External push-button system with doorbell function.
- Adjust monitor call volume, brightness, and contrast.
- Monitoring function. It is possible to observe the street without the need for a prior call.
- Compatible with the rest of the Videk range products.

2- MON 43V Monitor

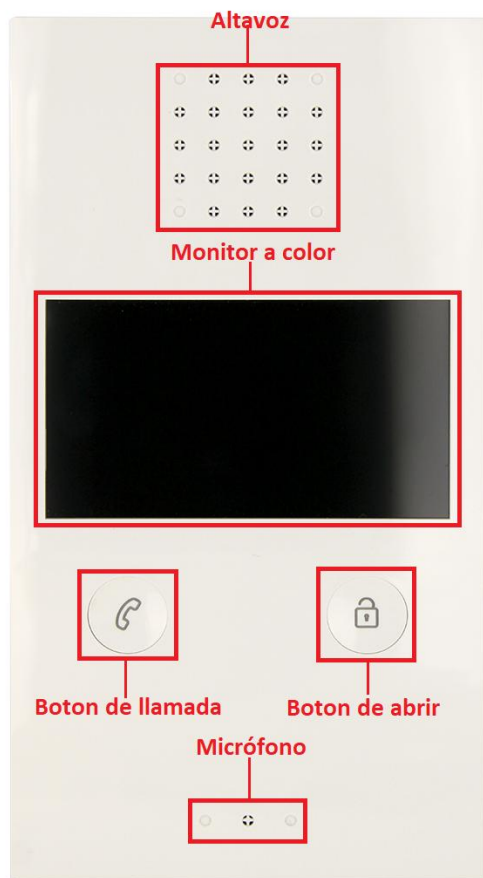

2.1 Configuration

2.1.1 Change Ringtone

Press and hold the "call button" until you hear a long beep, the current ringtone will sound.

There are 9 ringtones to choose from, press the "open button" to change the ringtone you want. To confirm the selected tone, press the "call button" again to save the settings and exit.

2.1.2 Display additional camera.

If there is an additional camera, during an incoming call, hold down the "call button" to see the additional camera view.

2.1.3 View and interact with the outer plates and additional cameras.

If you want to interact with the outer plates and/or analog cameras in your installation, there is a mode. Then press the "call button" once, it will activate the display of the outer plate, if you press a long press again, it will switch to the next outer plate and/or the camera in your installation.

First, you need to set up the identification of the outer plates and additional cameras.

2.1.4 Configure Outer Plate Camera and Additional Cameras.

Press and hold the "call and open" buttons at the same time until you hear a long beep. Start setting up the status of the multi-door station and the additional camera. Press as many times as the amount of code specific to the state of the door.

Examples:

There are 2 exterior plates and 1 additional cameras, the specific code would be 4.

Step 1: Press and hold the "call and open" buttons until a beep sounds

Step 2: Press the "call button" 4 times to indicate the code 4

To confirm the steps press "open button" again

There are 2 outer plates and no additional cameras, the specific code would be 3.

Step 1: Press and hold the "call and open" buttons until a beep sounds

Step 2: Press the "call button" 3 times to indicate the code 3

To confirm the steps press "open button" again

2.1.5 Table of configuration codes for exterior plates and additional cameras.

Configuration	Code	Configuration	Code
1 Outer Plate 0 Cameras	Code=1	3 Outer Plates 2 Cameras	Code=8
1 Outer Plate 1 Cameras	Code=2	3 Outer Plates 3 Cameras	Code=9
2 Outer Plates 0 Cameras	Code=3	4 Outer Plates 0 Cameras	Code=10
2 Outer Plates 1 Cameras	Code=4	4 Outer Plates 1 Cameras	Code=11
2 Outer Plates 2 Cameras	Code=5	4 Outer Plates 2 Cameras	Code=12
3 Outer Plates 0 Cameras	Code=6	4 Outer Plates 3 Cameras	Code=13
3 Outer Plates 1 Cameras	Code=7	4 Outer Plates 4 Cameras	Code=14

2.2 MON43V Monitor Connection



3 – Identification Code Table

Each MON 43 monitor or UAD intercom must have an identification configured via the bit code (dip switch on the back). Bits 1 through bit 5 are used to set up intercom identification. (Steps 5.2 and 6.2). *Bit-6 is the end-of-line switch, if the monitor is not, set it to OFF, otherwise set it to ON*

Bit state	User code	Bit state	User code	Bit state	User code	Bit state	User code
	Code=1		Code=10		Code=19		Code=28
	Code=2		Code=11		Code=20		Code=29
	Code=3		Code=12		Code=21		Code=30
	Code=4		Code=13		Code=22		Code=31
	Code=5		Code=14		Code=23		Code=32
	Code=6		Code=15		Code=24		
	Code=7		Code=16		Code=25		
	Code=8		Code=17		Code=26		
	Code=9		Code=18		Code=27		