



EKSELANS BY ITS

USER MANUAL

MON 43W

V1.1

INDEX

1 - Product Description	3
1.1 General characteristics.....	3
2- MON 43W Monitor	4
2.1 Navigation Panel	4
2.1.1 Main Panel.....	4
2.1.2 Main Menu	5
2.2 Visualize	5
2.3 Registration	6
2.4 Settings.....	6
2.4.1 System.....	6
2.4.2 Automatic opening by opening hours.....	7
2.5 Door Settings	7
2.5.1 Enable Unanswered Mailbox.....	7
2.5.2 Sound Settings.....	8
2.6 Cameras	8
2.7 Connection	8
2.8 Advanced	9
2.9 Mode Selection	9
3- Connect MON 43W with the Ek Smart app	10
3.1 Download the Ek Smart App.....	10
3.2 Enable Pairing Mode on the MON 43W	10
3.3 Add MON 43W to the Ek SMART app.....	11
3.3.1 Auto-Add.....	11
3.3.2 Add manually	12
4- MON 43W interface in the Ek Smart app.....	12
4.1 Main Menu.....	12
4.2 Settings menu.....	13

1 - Product Description

 
 
MON 43W monitor with high quality 4.3" color touch screen. Hands-free system with opening system without the need for prior dialing. Possibility of external viewing of the video intercom from the same monitor panel.

It has Wifi for connection via Smartphone to view, open and answer from anywhere.

1.1 General characteristics


- Non-polarized two-wire system.
- External push-button system with doorbell function.
- Adjust monitor call volume, brightness, and contrast.
- Monitoring function. It is possible to observe the street without the need for a prior call.
- Compatible with the rest of the products in the VIDEO DOOR Entry Com range Ek.
- Voicemail system when not getting an answer on the call.
- Do not disturb mode, to avoid interruptions.
- Automatic opening control by time programming.
- Call notification via Smartphone.
- Call log.

2- MON 43W Monitor

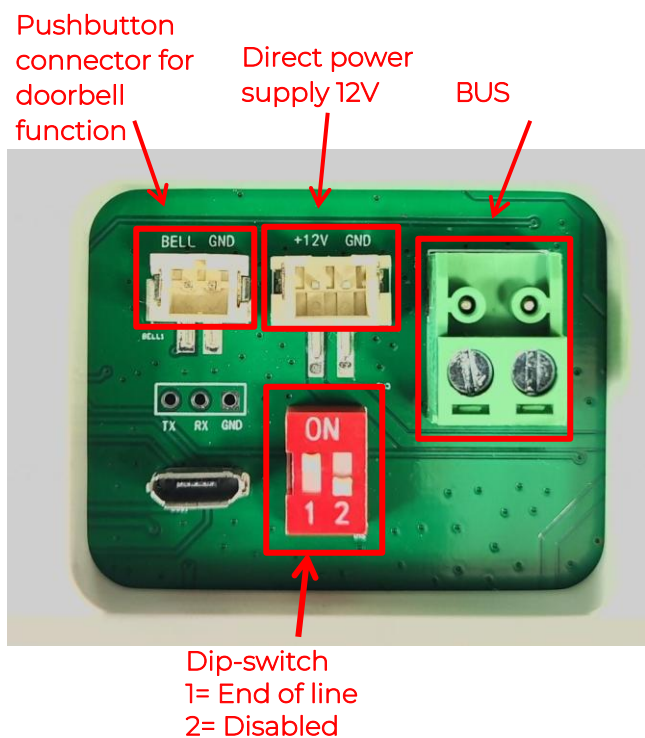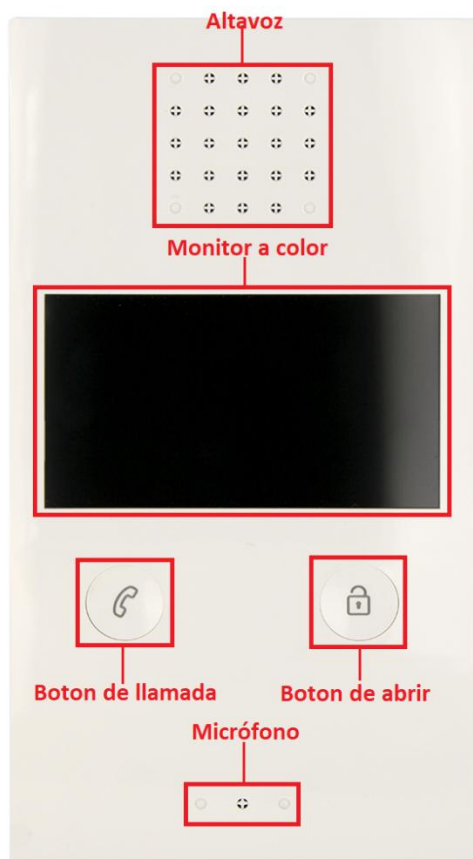

2.1 Navigation Panel

2.1.1 Main Panel

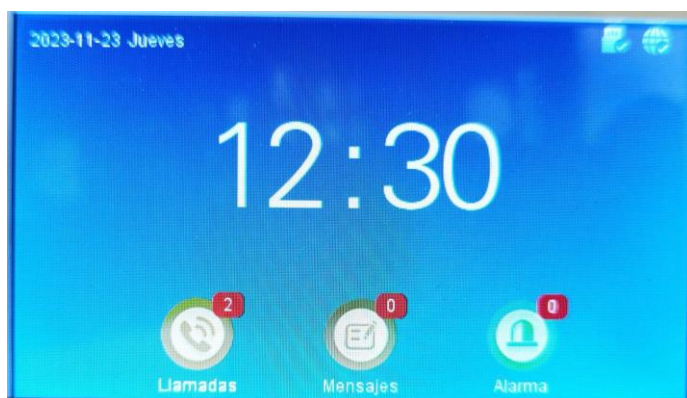

Three icons are displayed on the home page. Notifications of unanswered calls, messages if you have received a call in your absence and a message has been left (it is necessary to activate the answering machine beforehand. Section 2.5.1...). On the top right, it will tell you if the device is properly connected to the internet using WIFI and SD card detection.

2.1.2 Main Menu



Display: To be able to visualize the different analog boards and cameras that are in your installation

Internal call: You can make internal calls from video doorbell to video doorbell.

Log: Record of calls, messages, and alarm notices.

Settings: MON 43W ID settings, outer board, connection and advanced settings.

At home: Work mode configuration system.


At home: The device will ring normally.

Away from home: The device will ring normally.

Do Not Disturb: The device will not make any sound, but the screen will turn on.

Main: Redirect you to the main dashboard

2.2 Visualize

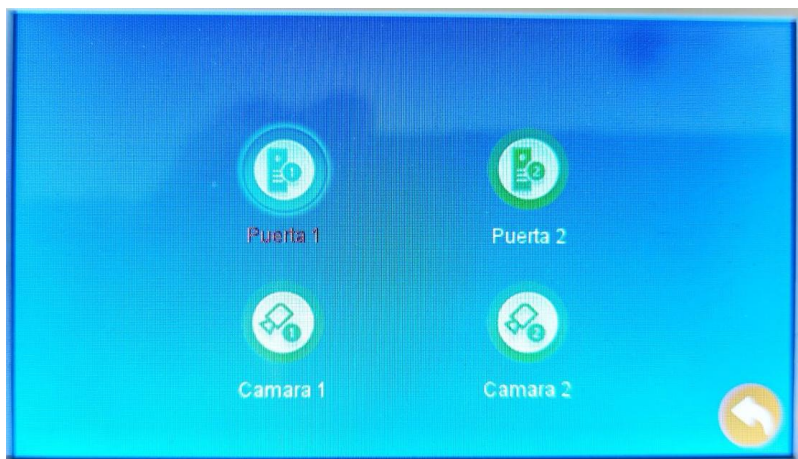

In the Display menu, you can view and manipulate the outer plates without prior marking. You will also be able to see the analogue cameras installed, if there are any in your installation.

2.3 Registration

In the log menu you will be able to see if you have had a call while you were away, unread messages and alerts.

2.4 Settings



2.4.1 System

On this screen you can configure the basic settings of the MON 43W, such as device ID, date and time settings. It also has the language configuration and the automatic opening system by means of hours.




2.4.2 Automatic opening by opening hours

To set an automatic opening hours, select Auto unlock and change it to **On**. Please indicate the start and end time below.

In the **Week** section, indicate which days you want to set the automatic unlocking, being 1 Monday and 7 Sunday.



2.5 Door Settings

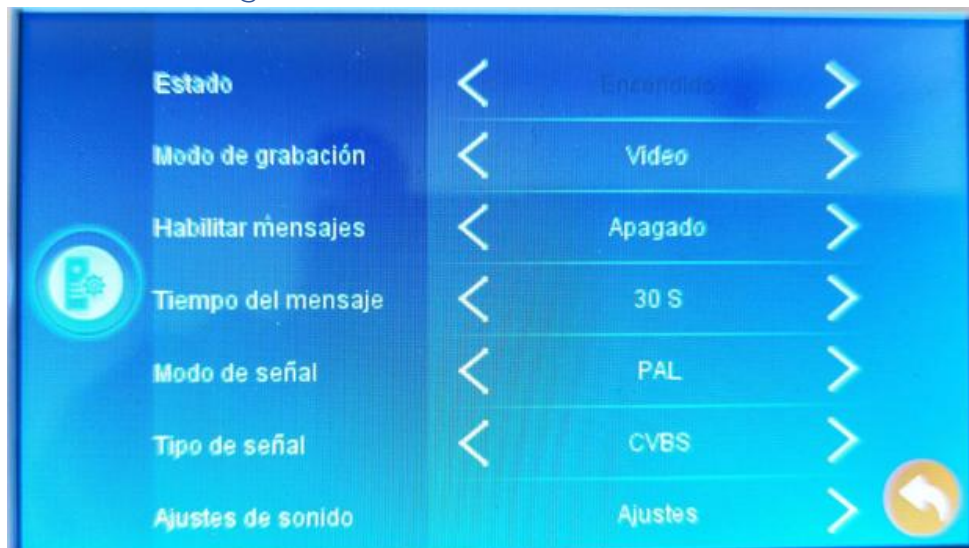

Under Door Settings, you can enable the video message box feature and automatic do not disturb mode settings.

2.5.1 Enable Unanswered Mailbox




To activate the call box, go to **Enable messages** and set it to Power. Set the duration of the message you want to save (Default: 30 seconds)

Note: If the call on the entrance plate is set to a duration shorter than the duration of the message, the message will not be able to respect the duration of this setting.

2.5.2 Sound Settings

In sound settings you can set 3 sound modes. In each mode, you can select the ringtone, volume, and set them by schedule.

Note: If you want to turn on a Do Not Disturb mode to prevent undesirable calls at night, select a mode, set the time you want not to be disturbed, and set the volume to 0.

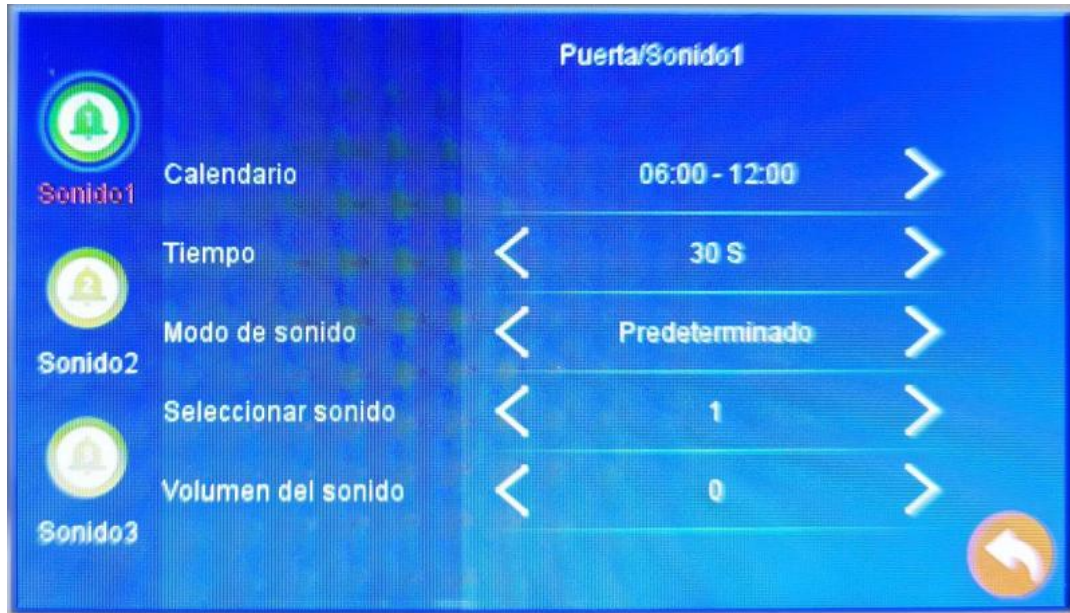

2.6 Cameras

In this menu you can configure the cameras of your installation (Maximum 2 cameras)

2.7 Connection

In this menu you can link the device to your Ek Smart account. Select the way you prefer to start the link.

AP Mode

The MON 43W will generate a WIFI point to connect directly to it and be able to configure it.

On screen it will show you the SSID and password to connect

EZ Mode

The EZ mode device will activate bluetooth and initiate automatic pairing for nearby devices.

2.8 Advanced

In this menu you will have the factory settings, format the SD card, update the device and restart it.

2.9 Mode Selection

The MON43W has three status modes



At home

Standard configuration. Standard volume to what is set in the Sound Settings (Step 2.5.2)

Vacation

Standard configuration. Standard volume to what is set in the Sound Settings (Step 2.5.2)

Do not disturb

In this mode, you will deactivate the ringtone of your MON 43W (Smartphone notifications will continue to work).

3– Connect MON 43W with the Ek Smart app

3.1 Download the Ek Smart App

To download the app, go to the Play Store or Apple Store on your mobile device and search for "Ek Smart" or access using the following QR code:



Ek Smart

3.2 Enable Pairing Mode on the MON 43W

To activate the pairing mode you need to activate the wifi mode of the MON 43W.

1. Go to Settings, then Go to Connection.




2. Select the type of connection you want (EZ Mode, AP Mode)

Selecting AP mode will prompt you for confirmation to restart the device.

3.3 Add MON 43W to the Ek SMART app

3.3.1 Auto-Add

Step 1: Step 2:

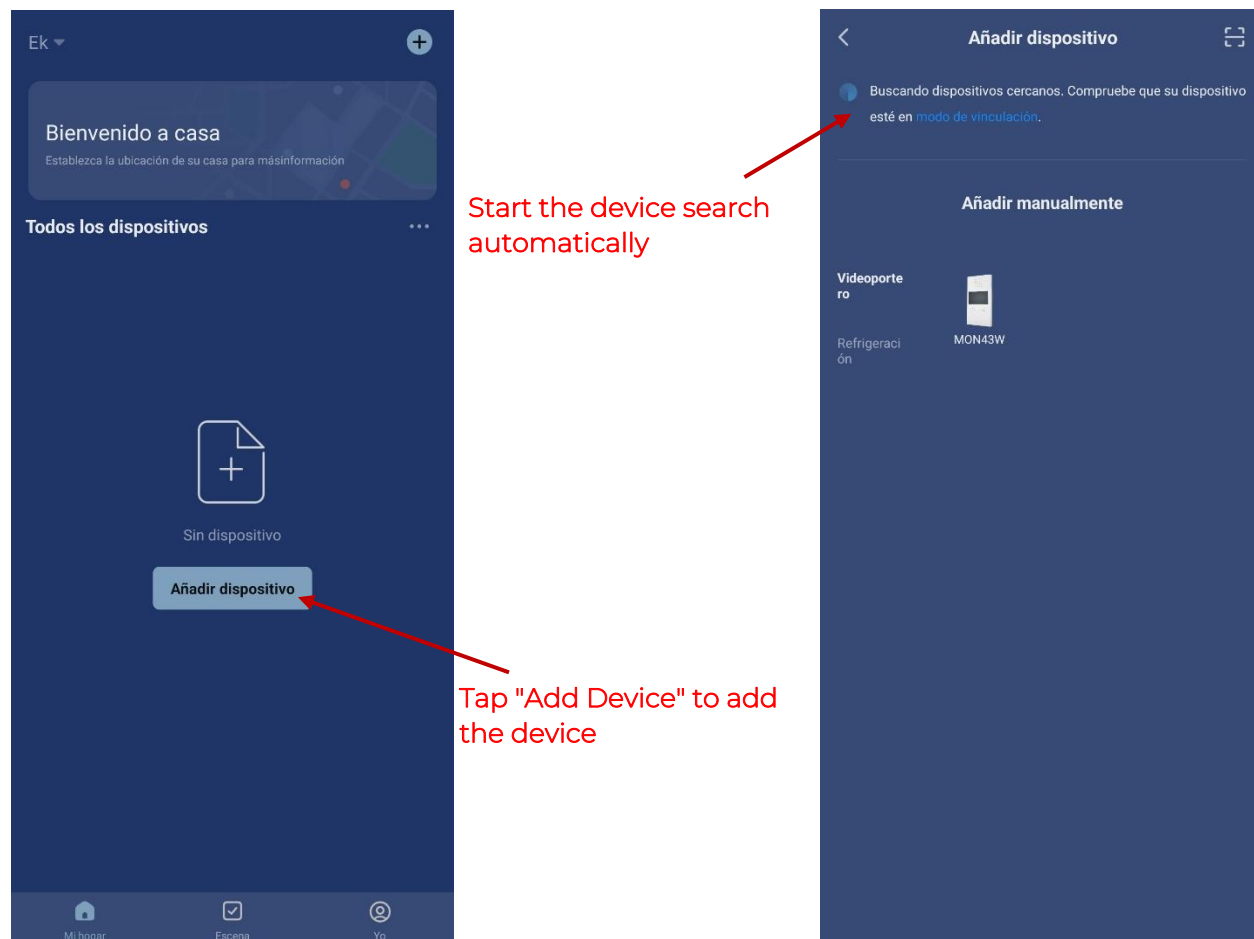

Once it finds the device, it will show you the device on the screen. Press "add" and it will start the configuration mode where it will ask for your WIFI connection and password.


Note: For automatic device detection it is necessary that you have Bluetooth enabled and the granted permissions of "detection of nearby devices"

3.3.2 Add manually

If you want to add the device manually, you must select the category Video intercom, model MON 43W and follow the instructions that will appear on your mobile device or else you can view the step-by-step instructions using the following link.

4- MON 43W interface in the Ek Smart app

4.1 Main Menu

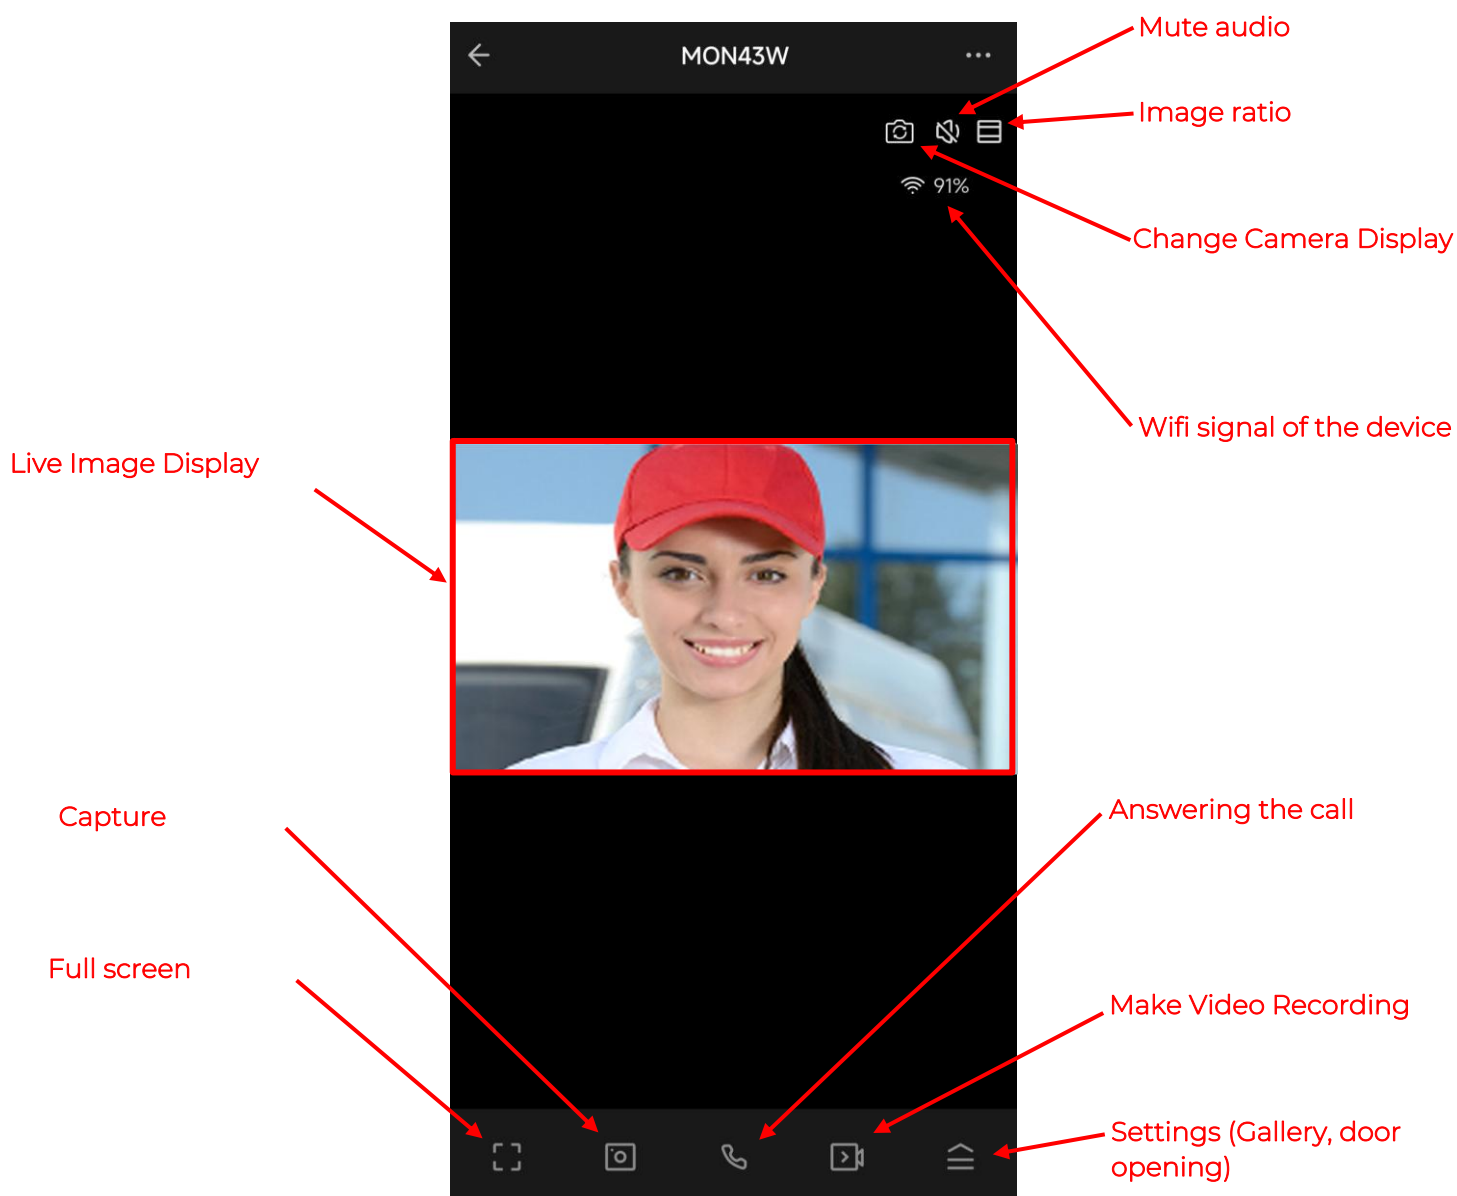

4.2 Settings menu

