

CM 4AV-IP

082007

4 AV-IP

SD digital modulator - Streamer


User's Manual



EKSELANS BY ITS

1 CM 4AV-IP – USER’S MANUAL

1.1 General Description

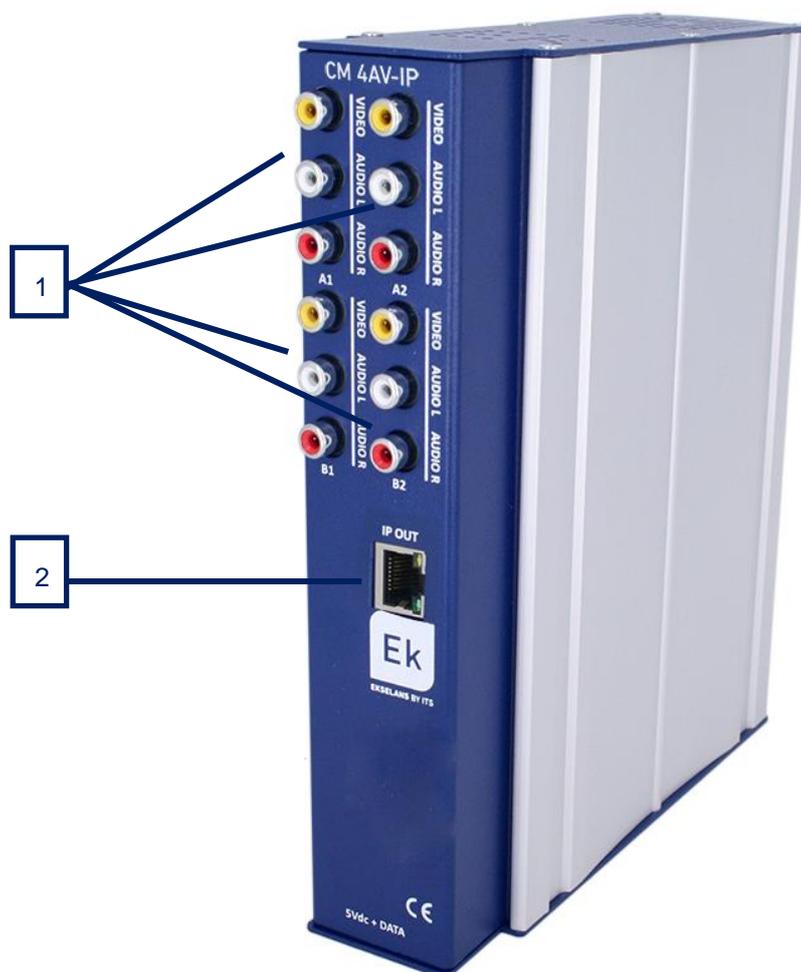

Number	Description
1	A/V (CVBS) Inputs. Connection to the audio/video power supply
2	RJ45 Connector. IP output

2. Installation and wiring

1. Fasten the digital encoder-modulator module to a wall frame (CHM TR) or a rack chassis (CHR TR). To this end assemble on the upper rear part of the module the supplied metal part,

as is shown in the picture



2. Connect the power supply (FA 524) to the module or either connect same to the previous module using the supplied power cable
3. Connect the HD audio/video sources to the HDMI connectors
4. So as to program the module, connect the FA 524 power supply to a PC via a USB-USB cable as follows:

Connect this part to the power supply



Connect this part to the PC

5. Install the "CMManagement" software on the PC or the or the "EK Pro" software package which is also included. Both programmes can be downloaded from the website www.ekselansbyits.com, Documentation >> Software section.
6. Run the programming software on the PC (**Important:** connect the FA 524 power supply to the PC before running the software so that the driver of the PC can correctly detect the software).

3. Software Programming: CM management


The "CM management" programming software enables the programming and running of all modules of the CM header. The program is available only for Windows operating system (XP

version 7 and above).

Once downloaded from the website www.ekselansbyits.com, Documentation >> Software section, having previously run the program with the PC connected to the USB port of the FA 524 power supply. In this fashion, it is ensured that the driver detects the core.

3.1.Main screen


The main screen of the "CM Management" software is as follows:

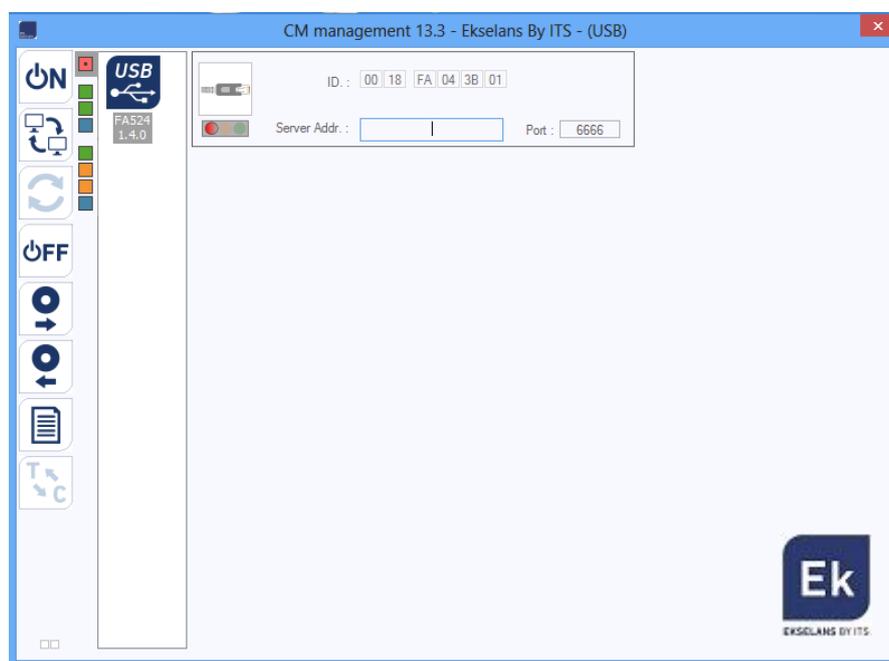

Through this function one can run and program all modules connected to the power supply. Explained below is the function of each of the options:

Number	Button	Function
1		Once connected the PC to the FA 524 power supply through the USB-USB cable, press this button in order for the power supply to identify the modules connected to it. Once activated, the blue logo is displayed
2		This icon will be displayed in blue with white lettering once the connection is established with the header. If not, it will be otherwise the white logo with blue lettering which will be displayed, making it then necessary to press button 1 again.
3		Through the FA 524 it is possible to carry out a remote connection with a header and to that end this button is used. The remote connection is explained below. If displayed in blue the remote connection is activated, and if white it is not activated.
4		Firmware updating. Press this button to load a file to update the firmware of the modules.
5		Press this button to switch off the FA 524 power supply of the operation of the various modules of the header. If it is disconnected, the logo will be displayed in white and blue lettering.
6		This option enables one to load a configuration program previously saved on the PC. The configuration file will have the .dtc extension
7		This option enables saving on the PC a programming configuration of a module to be subsequently loaded using button 6. A .dtc format file will be created.
8		Enables changing the output of the DVB-T (COFDM) modules to DVB-C (QAM).
9		Data-logger. Enables saving the data of the different modules of the header.


The main screen of the "CM management" enables to easily identify the different modules connected to the power supply, as can be seen in the following screen:

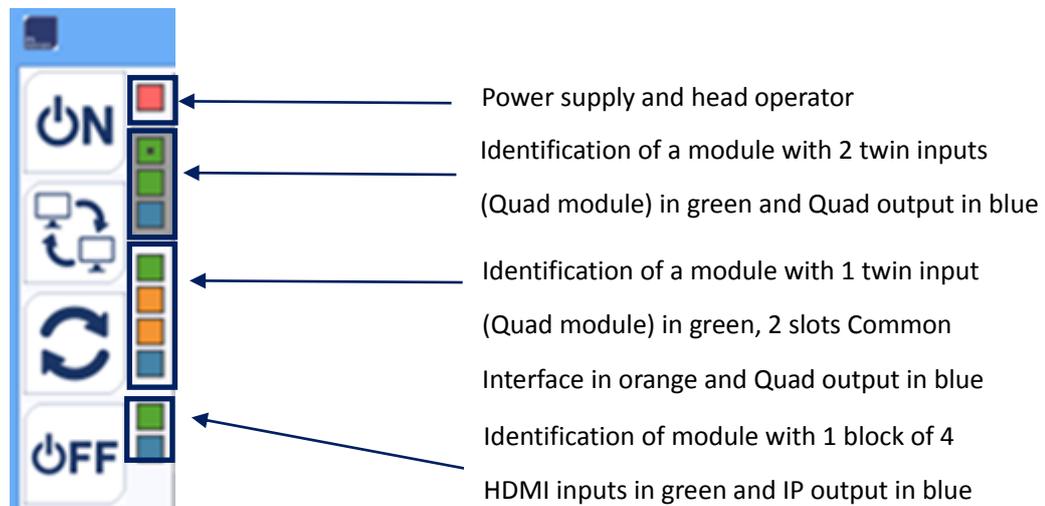


Each module is identified by means of a series of different coloured boxes. Depending on the module, this will be represented by 2, 3 or 4 boxes where the green represents the inputs, the blue the output and the orange the Common Interface slots.

3.2. Programming of the CM 4AV-IP module

Once the CM 4AV-IP module is connected to the FA 524 power supply, this in turn to the PC and the "CM management" programme open, select the CM 4AV-IP which is represented as follows:

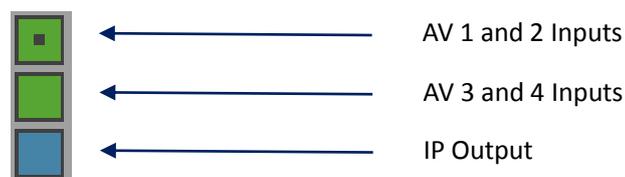

Select the upper green box, the programming interface of the first two AV inputs will appear as is shown below:

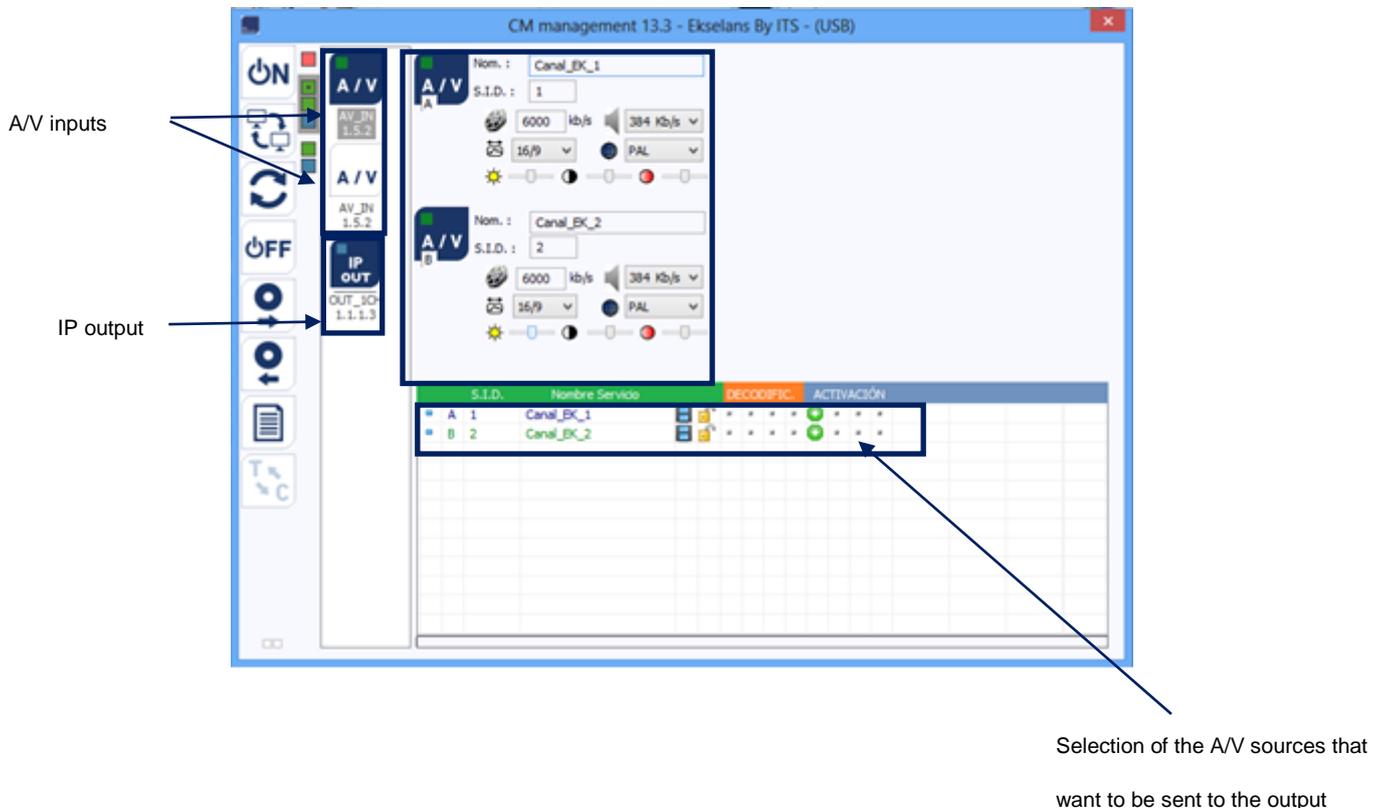


In order to program the module, connect in the first place the audio/video sources which are wished to be connected to the A/V connectors of the CM 4AV-TC module. Each AV input can be assigned a set of values, such as:

- SID: Unique identifier of the program
- Nam.: Software name
- Aspect ratio: defined by default in 16:9
- Video Standard: defined by default in PAL
- Audio rate: defined by default at 6000 Kbps, which can be selected from a predefined list

It is also possible to adjust the brightness, contrast and saturation settings.

In order to program the other two AV3 and AV4 inputs, click the bottom green box which identifies the CM4AV-IP module. The following screen will then be displayed:

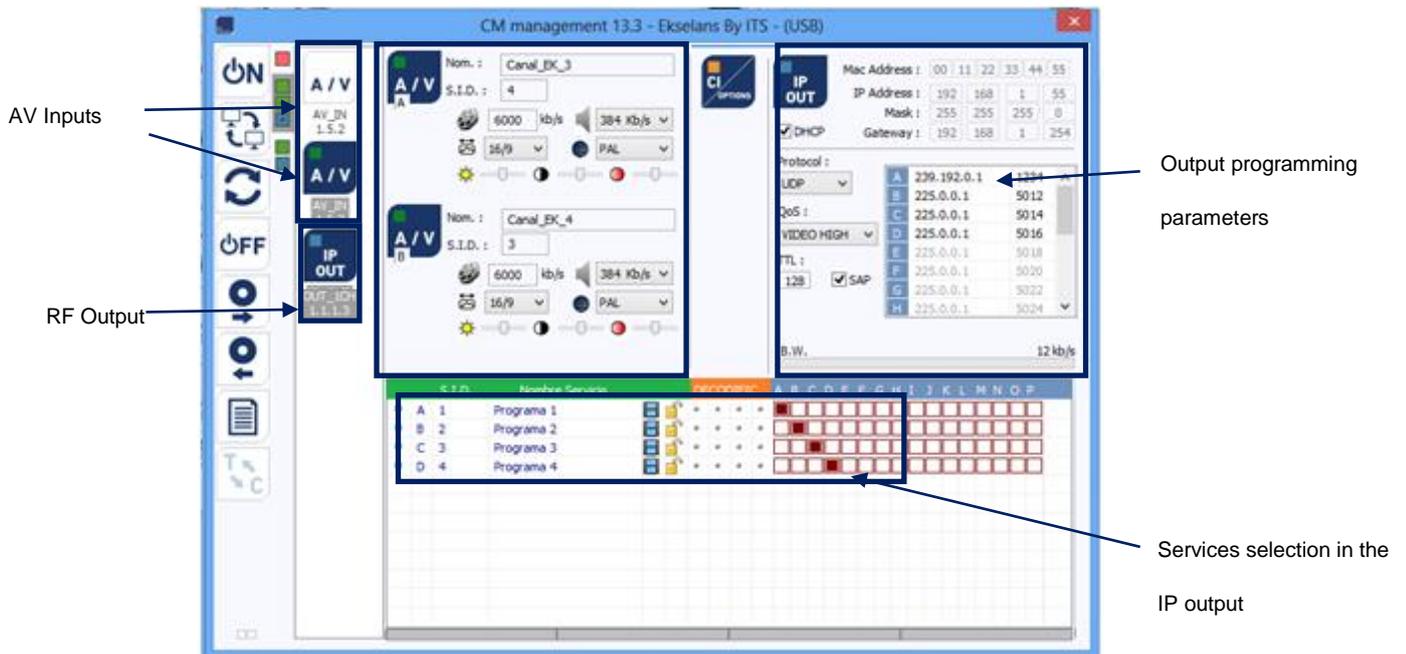


3.2.1 Conversion of the IP input services

Once the audio/video sources are connected to the corresponding input jacks, all these will appear at the bottom of the screen. From here one can make his/her assignment to each of the two IP streams available in output (up to 16). As shown in the figure below, in the section shown in red the 16 available streams (from A to P) are displayed.

S.I.D.	Nombre Servicio	DECODIFIC.	MODULACIÓN	LCN	HD LCN	N.SID
A 1	Imagenio					1
B 2	NoName B					
C 3	NoName C					
D 4	NoName D					


Depending on which column is selected the service  will appear in either output stream.

At the top right of the window one can set the IP output parameters:

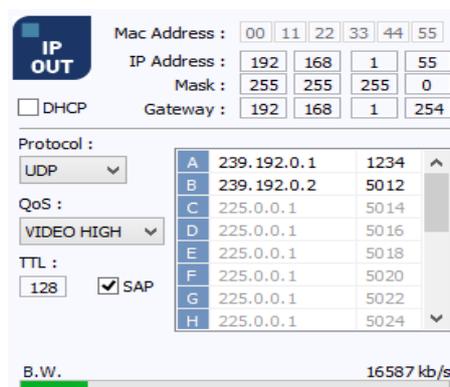

- MAC Address: MAC (media access control address) address of the module
- IP Address, mask and gateway: IP address, subnet mask and gateway which can be assigned for the CM 2STC-IP module
- DHCP (Dynamic Host Configuration Protocol): if the protocol for automatically obtaining the network parameters is activated, the remaining IP value settings are disabled
- Protocol: can select between UDP (User Datagram Protocol) and RTP (Real-time Transport Protocol). The UDP (User Datagram Protocol) protocol is recommended for streaming as it occupies less bandwidth.
- QoS (Quality of Service): enables the selection of the video quality of transmitted services
- TTL (Time to live or hop limit): a numeric value which specifies the maximum number of routers that an IP packet can pass through. The default value is set at 128.
- A – P: each letter corresponds to each of the possible streams which may exist in the output. Each letter can be associated with an IP address and a port, for example 239.192.0.1 and 1234 respectively

In this output parameter selection section there also appears information on the bit rate of each one of the mux outputs:

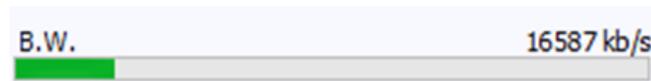

As shown above the overall bit rate of the output is displayed. The maximum carried is 100 Mbps.

3.2.2 Saving and loading a configuration

The "CM management" software enables saving on the PC the transmodulator for subsequently uploading to another CM 4HD-IP module. Its running is carried out using the following two buttons, available in the vertical menu on the right:

	<p>Save on the PC a programming configuration of a module to be subsequently loaded. A .dtc format file will be created.</p>
	<p>Load a configuration program previously saved on the PC. The configuration file will have the .dtc extension</p>

It is important to load the CM4HD-IP in a .drc file previously created with another similar module. Otherwise, the "CM management" software will display that it is not possible to load it.

3.2.3 Data-logger

The "CM management" software, through the Data-logger option enables one to generate and save to the PC a report containing the data of the various modules connected to a head core.

To that end, click on the icon  and specify the file name. A document with the html format which can be opened with a browser, similar to the following will be created.

CM management 13.3 - Ekselans By ITS - (USB)									
FA524									
V1.4									
ID	IP din.	Identificación		swichar					
0018F76A0B76	0.0.0.0			cm.dorlabs@cm.0066					
IN									
V11.1									
configuracion SWITCH									
	FREC.	S.R.	F.L.C.	SWITCH	LEVEL	Calidad	ESTADO		
A	11189.0Hz	27500	H	A	92%	64%	OK		
configuracion SWITCH									
	FREC.	S.R.	F.L.C.	SWITCH	LEVEL	Calidad	ESTADO		
B	12454.0Hz	20500	H	A	64%	0%	UNLOCKED		
RATE									
				200.50%					
Streaming N.I.D. 0066 (NOBREE - Canal EK)									
DE	HASTA	RITMO		RITMO					
10:50	11:00			Drapa Ball Super 1421.820TV.20x144p.2V					
10:51	11:00			NET_350.340X_1448m					
Lista Trans.									
D	MID	NOBREE	Type	Orbido	Utilizado				
A	12065	Canal EK	TV		X				
A	12066	RTL Germany	TV		X				
A	12064	RTL Pageant/NEW	TV		X				
A	12065	RTL HD 12G	TV		X				
A	12066	RTL PS	TV		X				
A	12067	RTL 2	TV		X				
A	12040	RTL Living	TV	X	X				
A	12040	STREET RTL	TV		X				

Important: in order to generate this report it is necessary that the "CM Management" program be run as the administrator.


3.3. Remote management of the headend

The headend CM transmodulation can be run remotely. This function is integrated in the FA 524 power supply and in each of the headend modules.

3.3.1 Access and remote programming of the CM 4AV-IP module

It is possible to remotely access a CM 4AV-IP module. To do so it must be connected to the FA 524 power supply and this in turn to the Internet.

In order to remotely access a head in which the CM 4AV-IP module which is wished to be run is connected, press the menu icon on the left.  The following screen will then be displayed:

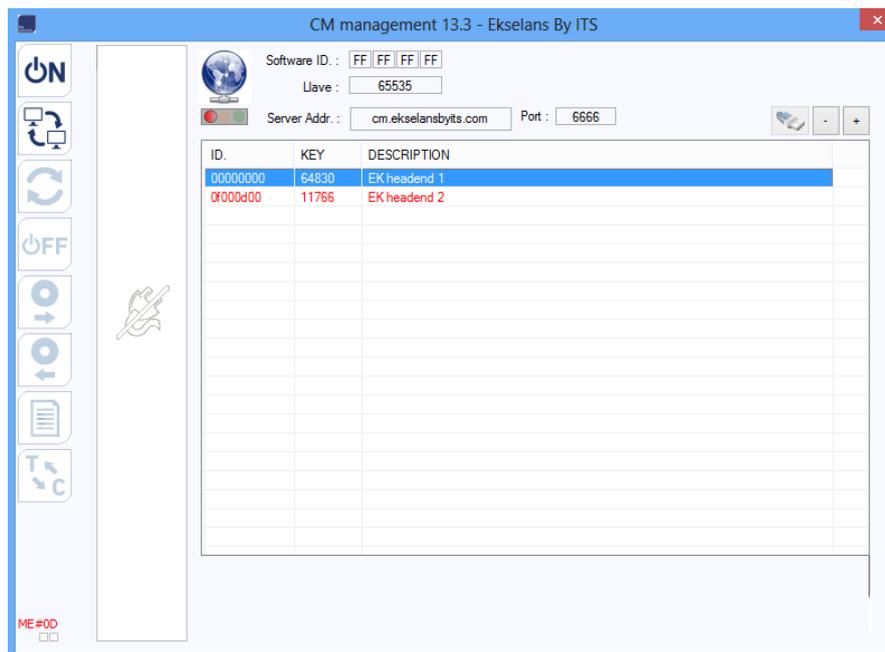

Upon the first connection the software's ID and a password must be specified. These are personal and non-transferable. In order to make use of same, please contact your Ekselans distributor so that it may be supplied. Once available, enter the password on the top part of the previous screen (Software ID and Password).

If all parameters are entered correctly, a connection with the cm.ekselansbyits.com server, dedicated to the remote running of the CM cores can be performed.

On this list all cores connected to the central server can be viewed. Remember that each 524 power supply includes FA the remote control manager, so that each power supply specifies a head. These are identified by an ID. Furthermore in order to access a password must be entered in the corresponding field.

If all data are correct, the connection to the server and the corresponding head shall be performed. When carried out, the head can be accessed as if it were in situ.

4 Technical specifications

Reference	CM 4AV-IP
Code	082007
Inputs	
Number of video inputs	4 x CVBS
Video resolution mode	PAL (720x576)/NTSC (720x480)
Video compression	MPEG 2
Number of audio inputs	4 x audio stereo/0.5-2.5 Vpp
Sample rate	48 KHz
Audio compression	MPEG1, LAYER II
DVB processing	Insertion of PAT, PNT, SDT, NIT table
Configuration	Program name, SID, LCN, NETWORK NAME, TSD, ONID, NID, VERSION NIT, LCN, PID, PMT, PID VIDEO, PID AUDIO
Output	
Number of outputs	1
Protocol	Multicast IP UDP/RTP
Number of streams	Up to 16 simultaneous streams (100 Mbps)
Miscellaneous	
Programming	Software PC "CM management" PC Software via USB connected to a FA 524 power supply
Power Supply	5 Vdc
Consumption	1,5 A
Temperature range	0 – 40°

Ekselans by ITS is a registered trademark of
ITS Partner (O.B.S.) S.L.
Av. Corts Catalanes 9-11
08173 Sant Cugat del Vallés (Barcelona)
www.ekselansbyits.com

